
Name	weiv robe Location	Locator View	Connector End View
Side Marker Lamp	On the left and right front and rear exterior of the vehicle	Lighting Systems Component Views	C200D (48 cavities)
Steering Wheel Controls	On the left and right side of the steering wheel	Entertainment Component Views in Entertainment	SIR Connector End
Stop Lamp/TCC Switch (Automatic)	Mounted on the brake pedal bracket	Cruise Control Component Views in Cruise Control	Lighting Systems Connector End Views
Taillamp	On the left and right rear exterior of the vehicle	Lighting Systems Component Views	· O217 ( <del>A g</del> avilies)
Tail/Stop Lamp (Chevrolet)	On the left and right rear exterior of the vehicle	Lighting Systems Component Views	andre and second se Andre and Second
Tail/Stop/Turn Lamp (Chevrolet)	On the left and right rear exterior of the vehicle	Lighting Systems Component Views	(Sealard Crocentees)
Tail/Stop/Turn Lamp, Inboard (Pontiac)	On the left and right rear exterior of the vehicle entry of the	Lighting Systems Component Views	0 <u>880</u> 
Tail/Stop/Turn Lamp, Outboard (Pontiac)	On the left and right rear exterior of the vehicle	Lighting Systems Component Views	
Theft Deterrent Relay	Under the IP, above the floor tunnel, attached to the inflatable restraint IP module bracket	and the carpet IF tig dear body harmoss, m	Theft Deterrent System Connector End Views in Theft Deterrent
Traction Control Switch (Chevrolet with NW9)	In the center of the IP, above the radio	ABS Component Views in ABS Traction Control	ABS Connector End Views in Antilock Brake System
Traction Control Switch (Pontiac)	On the left side of the upper console	Power Roof Systems Component Views in Roof	ABS Connector End Views in Antilock Brake System
Turn/Hazard Switch Assembly	On the left side of the steering column, part of the multi-function lever	shia del gel 4 <del>.0</del> o badastiA	Lighting Systems Connector End Views
Turn Signal Lamp Flasher	Under the instrument panel, right of the steering column	Lighting Systems Component Views	Lighting Systems Connector End Views
Turn Signal Lamp Flasher (Europe)	Under the instrument panel, right of the steering column	Lighting Systems Component Views	Lighting Systems Connector End Views
C105 (8 cavities)	Engine to forward lamp harness, in the engine compartment, above the right wheelhouse	Harness Routing Views in Wiring Systems	Inline Harness Connecto End Views in Wiring Systems
C160 (5 cavities) (Pontiac)	Left headlamp to the forward lamp harness, behind the headlamp door bracket	<i>Harness Routing Views</i> in Wiring Systems	Lighting Systems Connector End Views
C165 (5 cavities) (Pontiac)	Right headlamp to the forward lamp harness, behind the headlamp door bracket and a straight	<i>Harness Routing Views</i> in Wiring Systems	Lighting Systems Connector End Views
C170 (3 cavities) (Export)	Forward lamp harness to the left headlamp leveling motor harness	Harness Routing Views in Wiring Systems	00 <del>8</del> 4
C175 (3 cavities) (Export)	Forward lamp harness to the right headlamp leveling motor harness	Harness Routing Views in Wiring Systems	
C200A (17 cavities)	Forward lamp to IP harness, between the left kick panel and the steering column	Harness Routing Views in Wiring Systems	Inline Harness Connecto End Views in Wiring Systems
C200B (18 cavities)	Forward lamp to IP harness, between the left kick panel and the steering column	<i>Harness Routing Views</i> in Wiring Systems	Inline Harness Connecto End Views in Wiring Systems
C200C (13 cavities)	Cross car to IP harness, between the left kick panel and the steering column	<i>Harness Routing Views</i> in Wiring Systems	Inline Harness Connecto End Views in Wiring Systems

## Left Side of Instrument Panel

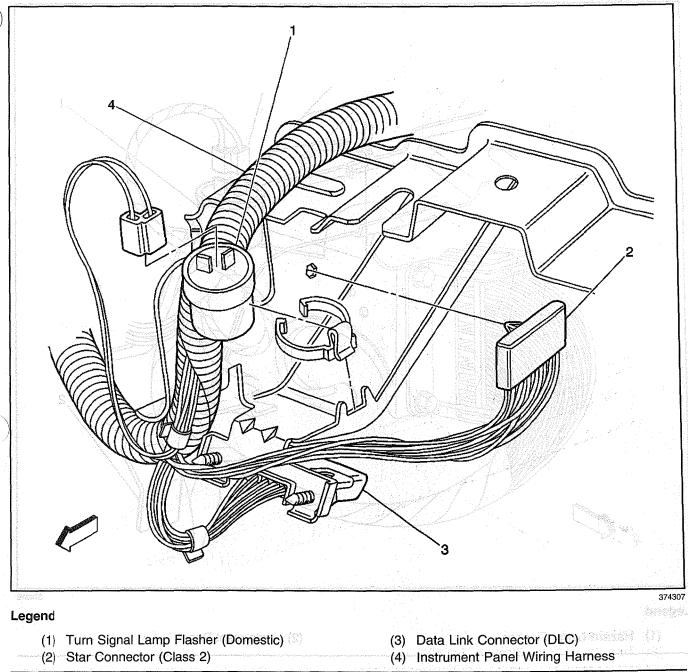

Hazard Warning Flasher

