

6F-4 EXHAUST SYSTEM

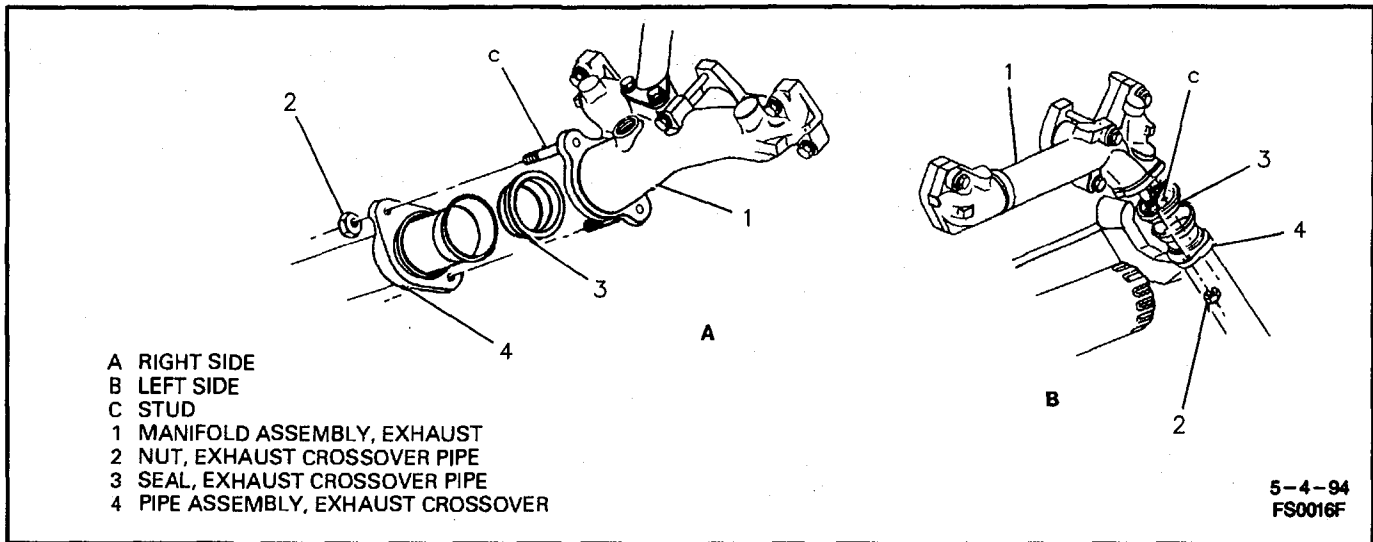


Figure 1 - Exhaust Manifold Attachments (3.4L L32 Engine)

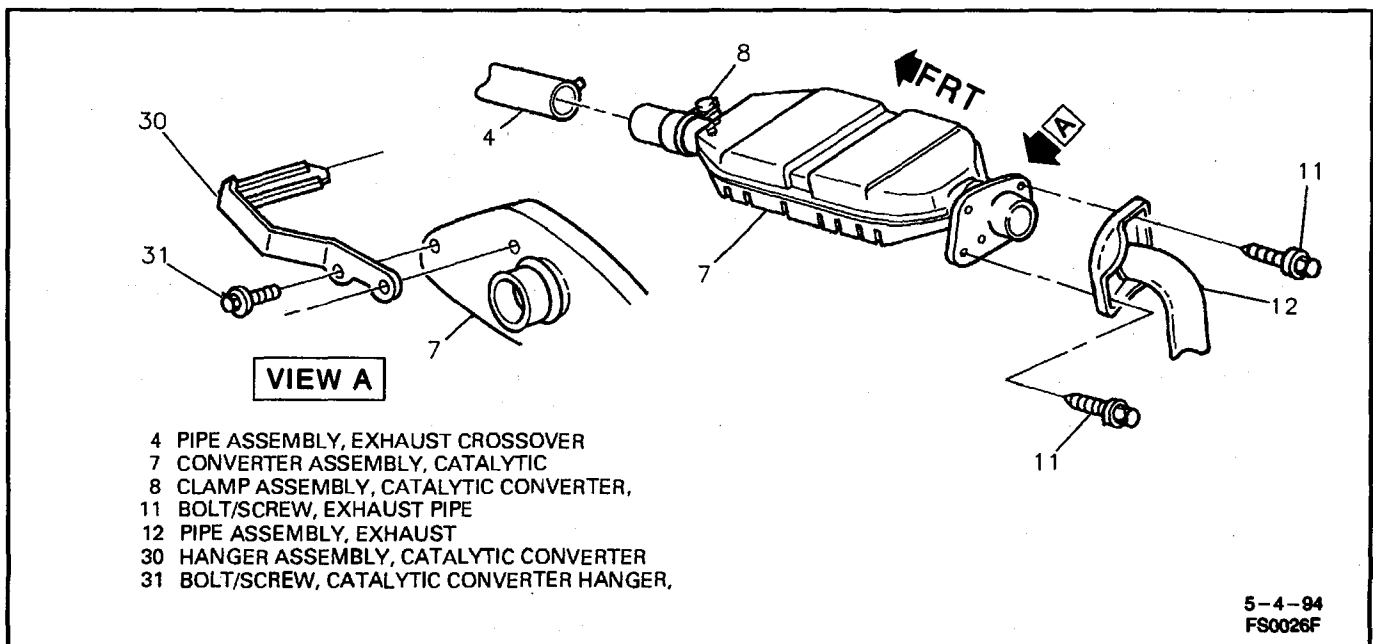


Figure 2 - Catalytic Converter Assembly (3.4L L32 Engine)

5.7L LT1 Engine

The crossover pipe is welded to the catalytic converter assembly. The crossover pipe and catalytic converter assembly are replaced as a unit. Refer to "Catalytic Converter Assembly" in the following procedure.

CATALYTIC CONVERTER ASSEMBLY

3.4L L32 Engine

Figure 2

Remove or Disconnect

1. Raise and suitably support vehicle. Refer to SECTION 0A.

2. Catalytic converter clamp assembly (8) at exhaust crossover pipe assembly (4).
3. Exhaust pipe bolts/screws (11).
4. Exhaust pipe assembly (12) from catalytic converter assembly (7).
5. Catalytic converter hanger bolts/screws (31).
6. Catalytic converter assembly (7).

Install or Connect

NOTICE: See "Notice" on page 6F-1 of this section.

1. Catalytic converter assembly (7) to catalytic converter hanger assembly (30).
2. Catalytic converter hanger bolts/screws (31).