

\*Make sure printer did not adjust:

↑  
Edge of sheetmetal —  
Use as point of  
alignment with template


Centerline of →  
tunnel  
Use as point of  
alignment

Edge of crease  
in sheetmetal } Use  
to verify alignment }

↑  
Note:  
Scam S  
must be  
removed  
find ali  
edge

10 5/16"

10 11/16"

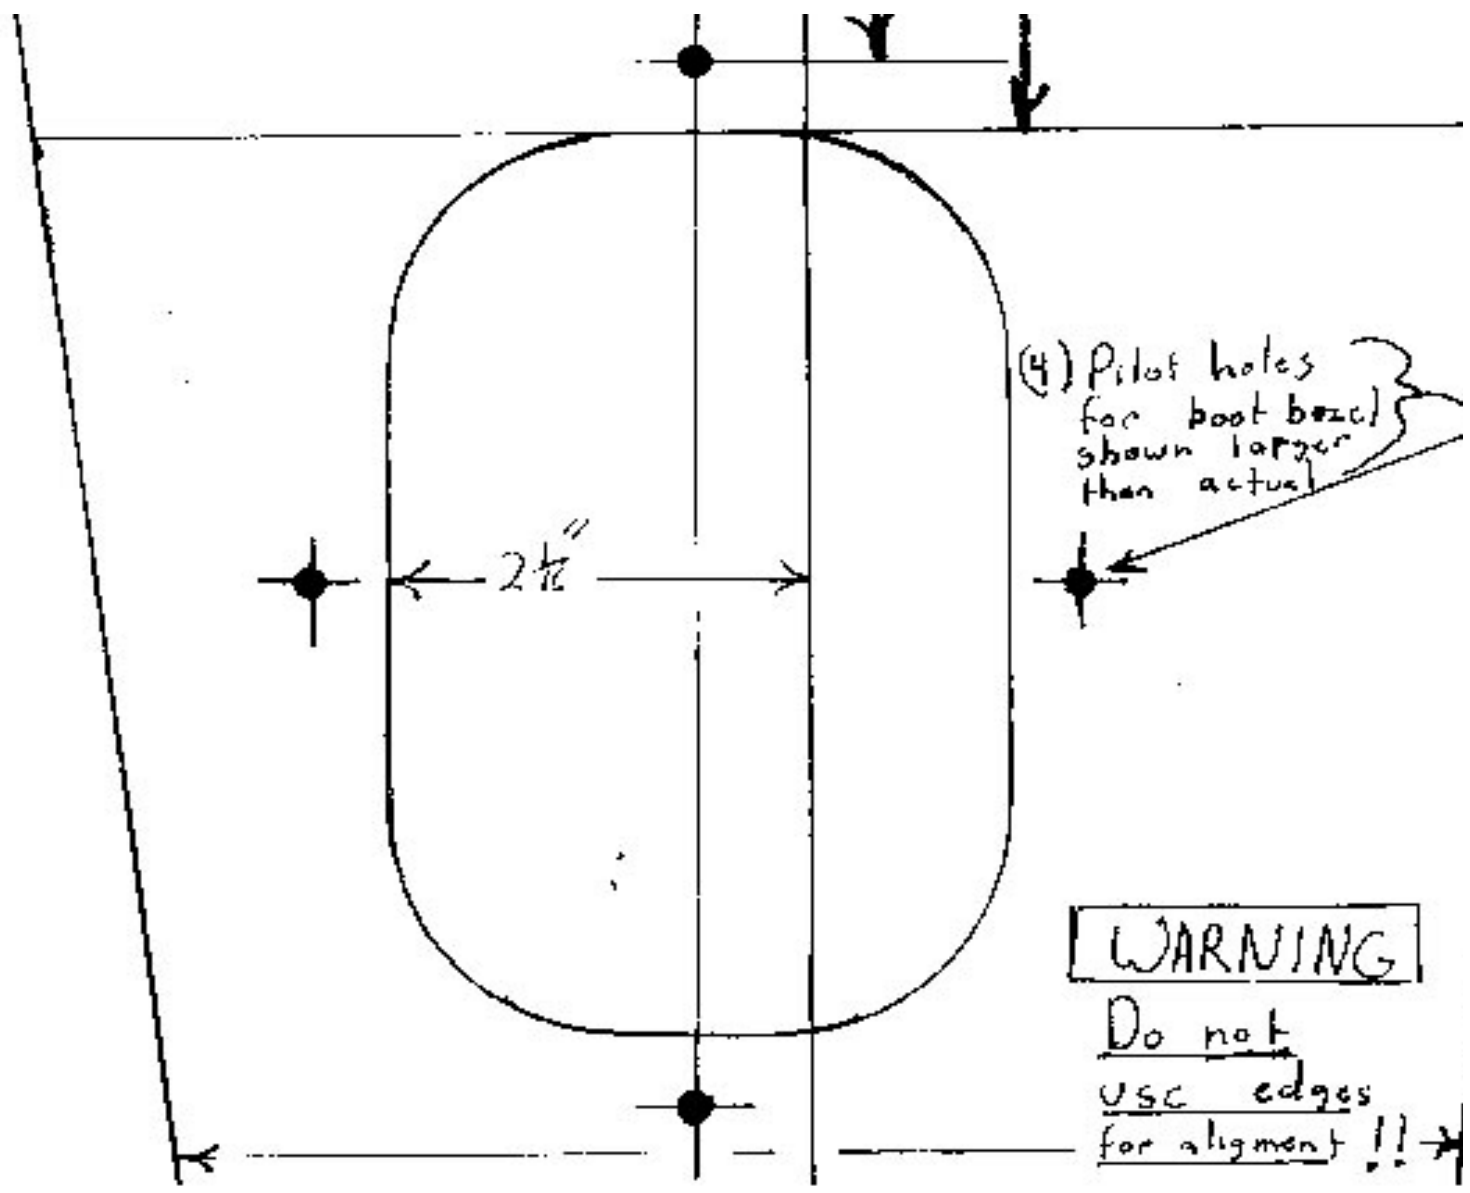

just size of template

Sealer  
be  
d to  
ligament

