


Fuse: Application and ID

I/P Fuse Block

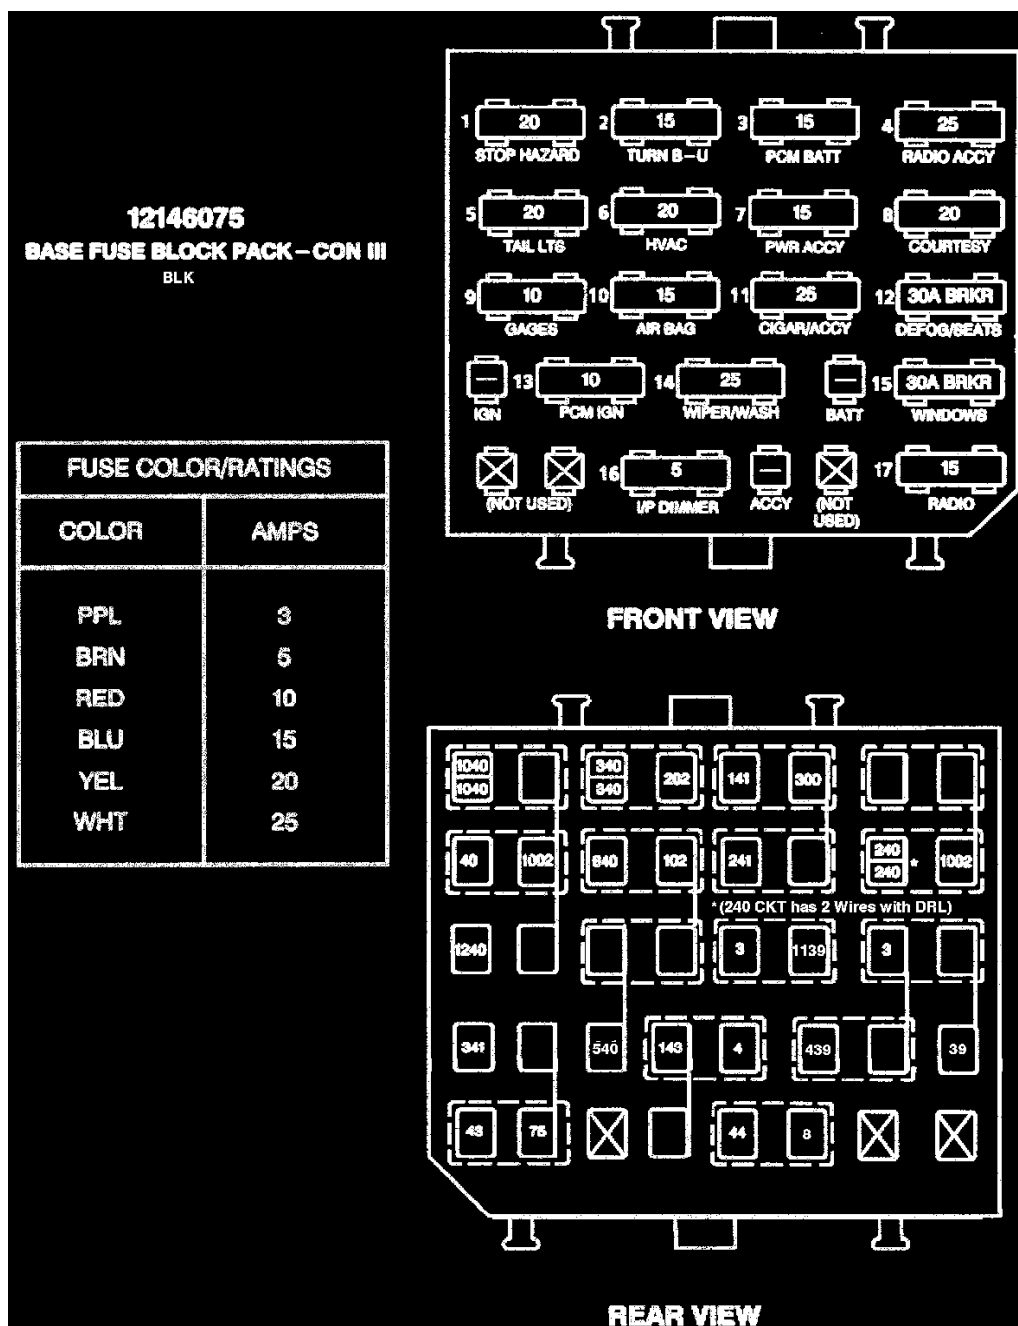

I/P Fuse Block

FUSE NUMBER	FUSE NAME	RATINGS (AMPS)	RELATED CIRCUITRY
1	STOP/HAZARD	20	Hazard Flasher, Brake Switch Assembly
2	TURN B-U	15	Traction Control Switch, Transmission Range Switch, Backup Light Switch, Turn Flasher, Daytime Running Lamps (DRL) Module
3	PCM BAT	15	Powertrain Control Module (PCM), Fuel Pump Relay
4	RADIO ACCY	25	Radio Power Antenna, Remote Compact Disc Charger
5	TAIL LTS	20	Daytime Running Lamps (DRL) Module, Headlight Switch
6	HVAC	20	HVAC Selector Switch, Rear Defogger Timer/Relay, Rear Defogger Switch
7	PWR ACCY	15	Park Lamp Relay, Hatch Release Relay, Power Mirror Switch, Radio, Shock Sensor, Instrument Cluster
8	COURTESY	20	Body Control Module (BCM)
9	GAGES	10	Body Control Module (BCM), Brake Switch Assembly, Instrument Cluster, Daytime Running Lights (DRL) Module
10	AIR BAG	15	Inflatable Restraint Diagnostic Energy Reserve Module (SDM)
11	CIGAR/ACCY	25	Cigar Lighter, Data Link Connector (DLC), Auxiliary Accessory Wire
12 (Circuit Breaker)	DEFOG/SEATS	30	Rear Defogger Timer/Relay, Power Seats
13	PCM IGN	10	Powertrain Control Module (PCM), EVAP Cannister Purge Vacuum Switch, EVAP Cannister Purge Valve, Transmission
14	WIPER/WASHER	25	Wiper Motor Assembly, Wiper/Washer Switch
15 (Circuit Breaker)	WINDOWS	30	Power Window Switch (RH, LH), Power Window Control Module, Convertible Top Switch
16	IP DIMMER	5	Door Illuminating Lamp (LH,RH), Headlamp Switch, Fog Lamp Switch, Instrument Cluster, HVAC Control Assy, PRNDL Illumination Lamp, Ashtray Lamp, Radio, Steering Wheel Controls-Radio, Convertible Top Switch, Traction Control Switch
17	RADIO	15	Body Control Module (BCM), Radio, Steering Wheel Controls-Radio

I/P Fuse Block