


If this contact does not fully disconnect in the off position, there would be power to IP fuse #9 causing the lights to stay on.

With key switch off, both sides of this fuse (IP fuse #9) should be dead. If one side is hot, trace the power back to its source.

8A - 81 - 2 ELECTRICAL DIAGNOSIS

INSTRUMENT CLUSTER

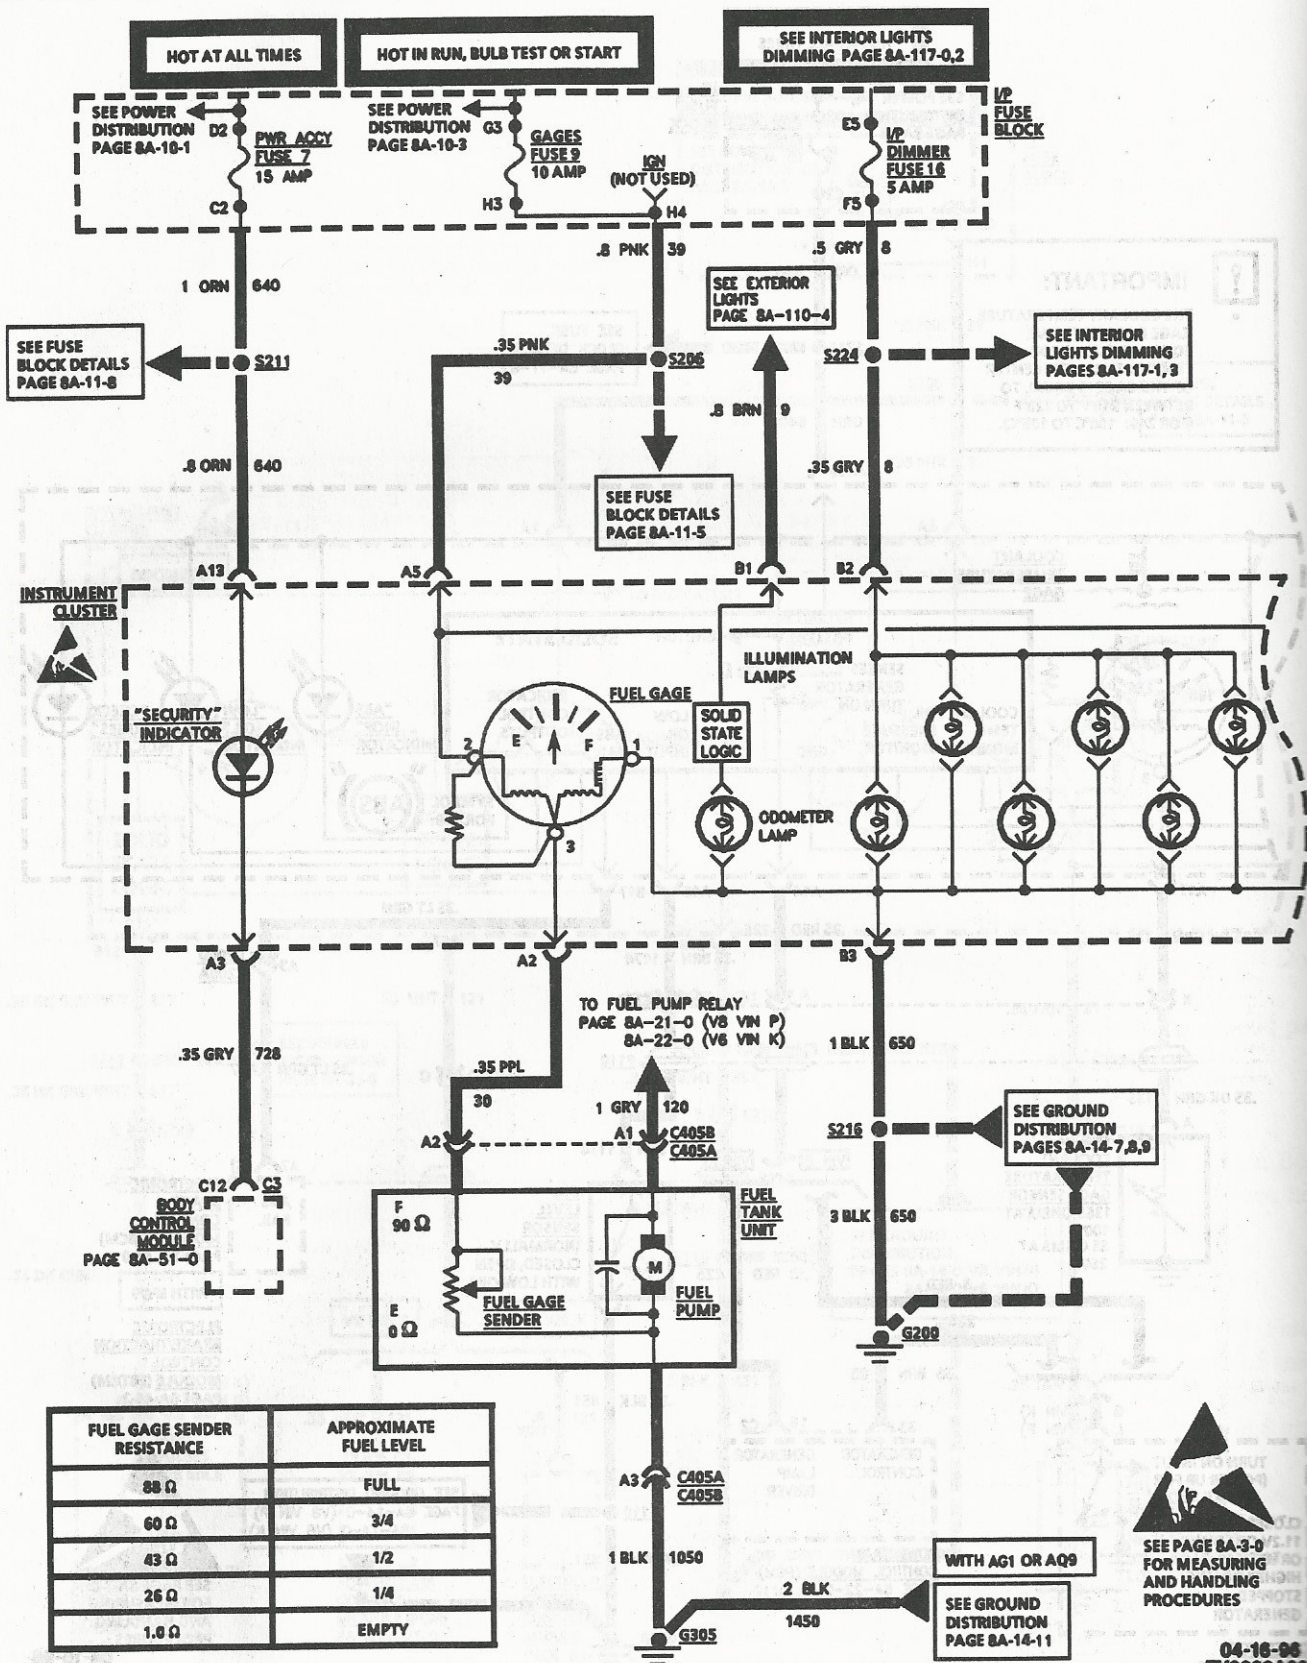

FUEL GAGE SENDER RESISTANCE	APPROXIMATE FUEL LEVEL
88 Ω	FULL
60 Ω	3/4
43 Ω	1/2
26 Ω	1/4
1.0 Ω	EMPTY

SEE PAGE 8A-3-0 FOR MEASURING AND HANDLING PROCEDURES

04-16-96
FV0028A061

